



# Alfa Delta ΔΙΟΝΙΣΙ

## User's Manual

Version 1.2, November 17, 2024.  
Alfa Delta © 2024  
<https://alfadelta.be/dionisi.html>

Welcome	3
Features	4
In the box	5
Installing	5
Functional overview	6
One of 6 oscillators overview	8
Controls and connections	10
Output selection	12
Parameter and value selection	12
Definitions	12
VCO1 - VCO6	13
Copy parameters	17
Bias and 4-quadrant modulator	17
Quantiser setting the base note	17
Mix1, Mix2	18
Presets	18
Notes (Steps)	19
MIDI	20
Overview of factory presets	21
Usage tips, patching	22
Startup	22
Explore VCO parameters and settings	22
Explore VCO outputs	22
Explore Mixers	23
	1

Explore inputs and external modulations	23
Explore internal modulations	23
Factory presets update	24
Firmware update	25

# Welcome

Congratulations with your purchase of ΔΙΟΝΙΣΙ (Dionisi), an analog voltage and MIDI controlled multiple digital oscillator and mixer, with an analog look and feel and digital precision, accuracy and tuning and tracking stability.

ΔΙΟΝΙΣΙ can be used as a VCO, or rather 6 of them, as an LFO with different ranges, as a bias module, as a 4-quadrant modulator, as a mixer, well two of them and that is just scratching the surface.

ΔΙΟΝΙΣΙ has an extensive modulation matrix which can use any CV input or VCO or MIDI as a source and route it to all possible modulations, like Exponential FM, thru-zero Linear FM, PM, 4-quadrant AM and Sync.

Cross-modulation and exact frequency ratios and detune allow for precise FM and PM patches.

By assigning modulation depths to CV inputs and using the Bias pots, one has immediate control over any modulation. Minimum and maximum modulation depth can be set separately from -1 to +1, allowing e.g. 2 (or more) parameters to be controlled in reverse from 1 Bias pot. MIDI controllers can be used for the same purpose, and at the same time all CV inputs remain available.

All settings can be stored in user presets, and there is a bunch of great factory presets as well to get you started.

The user interface features a graphical OLED display, 3 encoder dials and 6 pushbuttons for fast access to all parameters in all modules, without the need for menu diving.

ΔΙΟΝΙΣΙ is a versatile and complex module, so please read this manual for getting the most out of your module.

ΔΙΟΝΙΣΙ is designed and manufactured in Belgium.

Electronics and firmware design by Wim Verheyen.

Conceptual consultancy and early testing for usability by Boris Uytterhaegen.

# Features

- Eurorack 28 HP, 35mm depth.
- Digital module with analog ins and outs, analog look and feel.
- Values are indicated in musical units like steps, cents, Hz, seconds.
- Analog controlled digital oscillator x 6. One output per oscillator.
- Two mix outputs. Six assignable inputs per mixer, can be VCO outputs or CV inputs.
- Frequency follows first oscillator with (quantized) detune and Fine Hz or independent frequency control or frequency ratio per oscillator.
- 1V/oct, 12 octaves range, perfect tracking and stability.
- 4 frequency ranges per oscillator from 0.00033 Hz (that is 3000 seconds) Hz to 20 kHz.
- Classic waveforms (sine, triangle, saw, ramp, square, pulse), selectable per oscillator.
- Voltage or digital Controlled Exponential FM, Linear FM (thru-zero), AM (4-quadrant), per oscillator.
- Phase modulation thru-zero, initial phase adjustable from -360 to + 360 degrees in 1 degree steps.
- AM, PM and FM index (depth) control from CV inputs or VCO outputs.
- All modulations from zero to full depth from DC to 20 kHz.
- 8 freely assignable CV modulation inputs with initial and depth control (no analog attenuverters, digital attenuverters) and peak detect indicator on display.
- 6 freely assignable gate inputs for syncing (positive edge, negative edge, both edges, reset phase).
- Cross modulation of each parameter of each oscillator (6-operator FM or PM).
- Quantizer with different scales (Equal, Just, Pythagoras aug4, Pythagoras dim5, Mean tone, Harmonic, Werckmeister, Arabic).
- 16 bit resolution on all inputs and outputs, sample rate is 100 kHz, anti-aliased waveforms.
- Easy parameter navigation : 4-line 21-character graphic OLED display, 3 encoder dials, 6 buttons, no menus.
- Useful factory presets like FM algorithms, chords, additive synthesis and more.
- 2 banks of 64 user presets.
- MIDI input for free firmware and preset updates and MIDI notes (note number (ST) 60 is middle C (C4)), pitch bend, velocity, after touch, continuous controllers and preset selection (bank and program change).
- MIDI controller “learn” mode immediately assigns a MIDI controller to a parameter.
- Extensive manual, which is needed for a complex module like this.
- Power requirements : +12 V 170 mA, -12 V 75 mA.

## In the box

- The ΔIONISΙ module.
- 16-to-10-pin Eurorack power cable.
- Mounting hardware: four M3 x 6 mm phillips head screws, four nylon washers.

## Installing

The module features a shrouded header and MOSFET protection against polarity reversal.

The module is intended to be mounted in a Eurorack compatible rack.

Make sure the power to your case is disconnected before installing the module.

Ensure that the power supply of your case can supply sufficient power for all your modules, including ΔIONISΙ.

It is strongly advised to use a decent power supply and busboards with shrouded headers.

Plug the 10-pin connector of the power cable into the module.

Plug the 16-pin connector of the power cable into the bus board of your case.

If your bus board does not feature shrouded headers, replace it by a decent bus board, or if you insist, make sure the red stripe on the power cable aligns with the -12V pins on the board.


Double-check that both connectors are correctly oriented and fully inserted.

Mount the module in the front of the case with the supplied screws and nylon washers.

Now power up the case, if all is well you will see a welcome message on the display for 3 seconds after which the module displays its output, parameter and value.

If you don't observe this proper behaviour, switch off the power immediately and check your connections and power supply.

# Functional overview

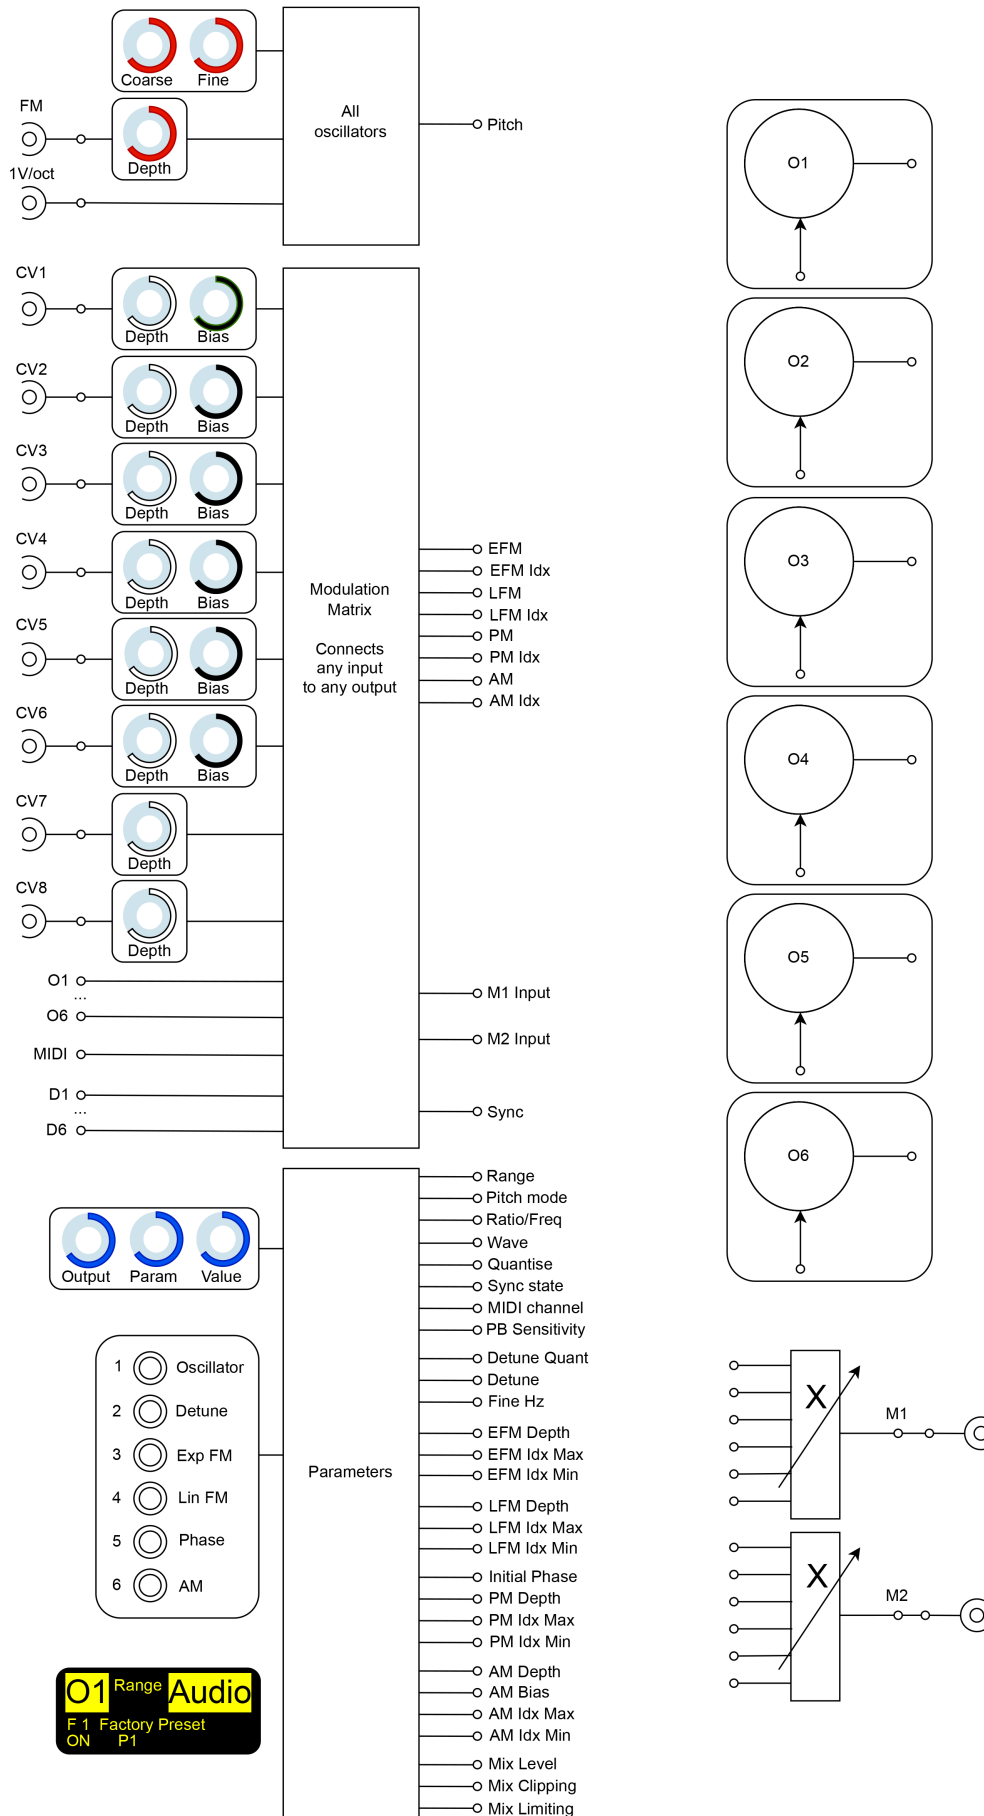

## Pitch

On the top left is the Pitch block which controls all oscillators, it features Coarse and Fine pots, a FM input with attenuator and a calibrated 1V/octave input.

## Modulation matrix

Below that is the modulation matrix

On the input side are 6 CV inputs with attenuator (depth) and bias pots, an additional 2 CV inputs with attenuator (depth) pots, the outputs of all oscillators and the MIDI input. Also on the input side are 6 digital inputs.

On the output side are all modulation and index outputs to the oscillators. The outputs are shown here for 1 oscillator, in reality there are 6 groups of outputs, 1 for each oscillator. Also on the output side are the mixer inputs (6 per mixer) and the Sync input (per VCO).

Any input can be routed to any output in any combination.

## Parameters

On the bottom left is the Parameters block.

It is controlled by 3 encoder dials and 6 pushbuttons for easy selection of the different parameters, shown on the OLED display.

The parameters are shown here for 1 oscillator, in reality there are 6 groups of parameters, 1 for each oscillator.

The parameters are shown here for 1 mixer, in reality there are 2 groups of parameters, 1 for each mixer.


## Oscillators

To the right are the six oscillators which are viewed in depth on the next page.

## Mixers

And below that are the 2 6-input mixers. Any input of the mixer can select any CV input or any oscillator output, together with the mix level.

# One of 6 oscillators overview

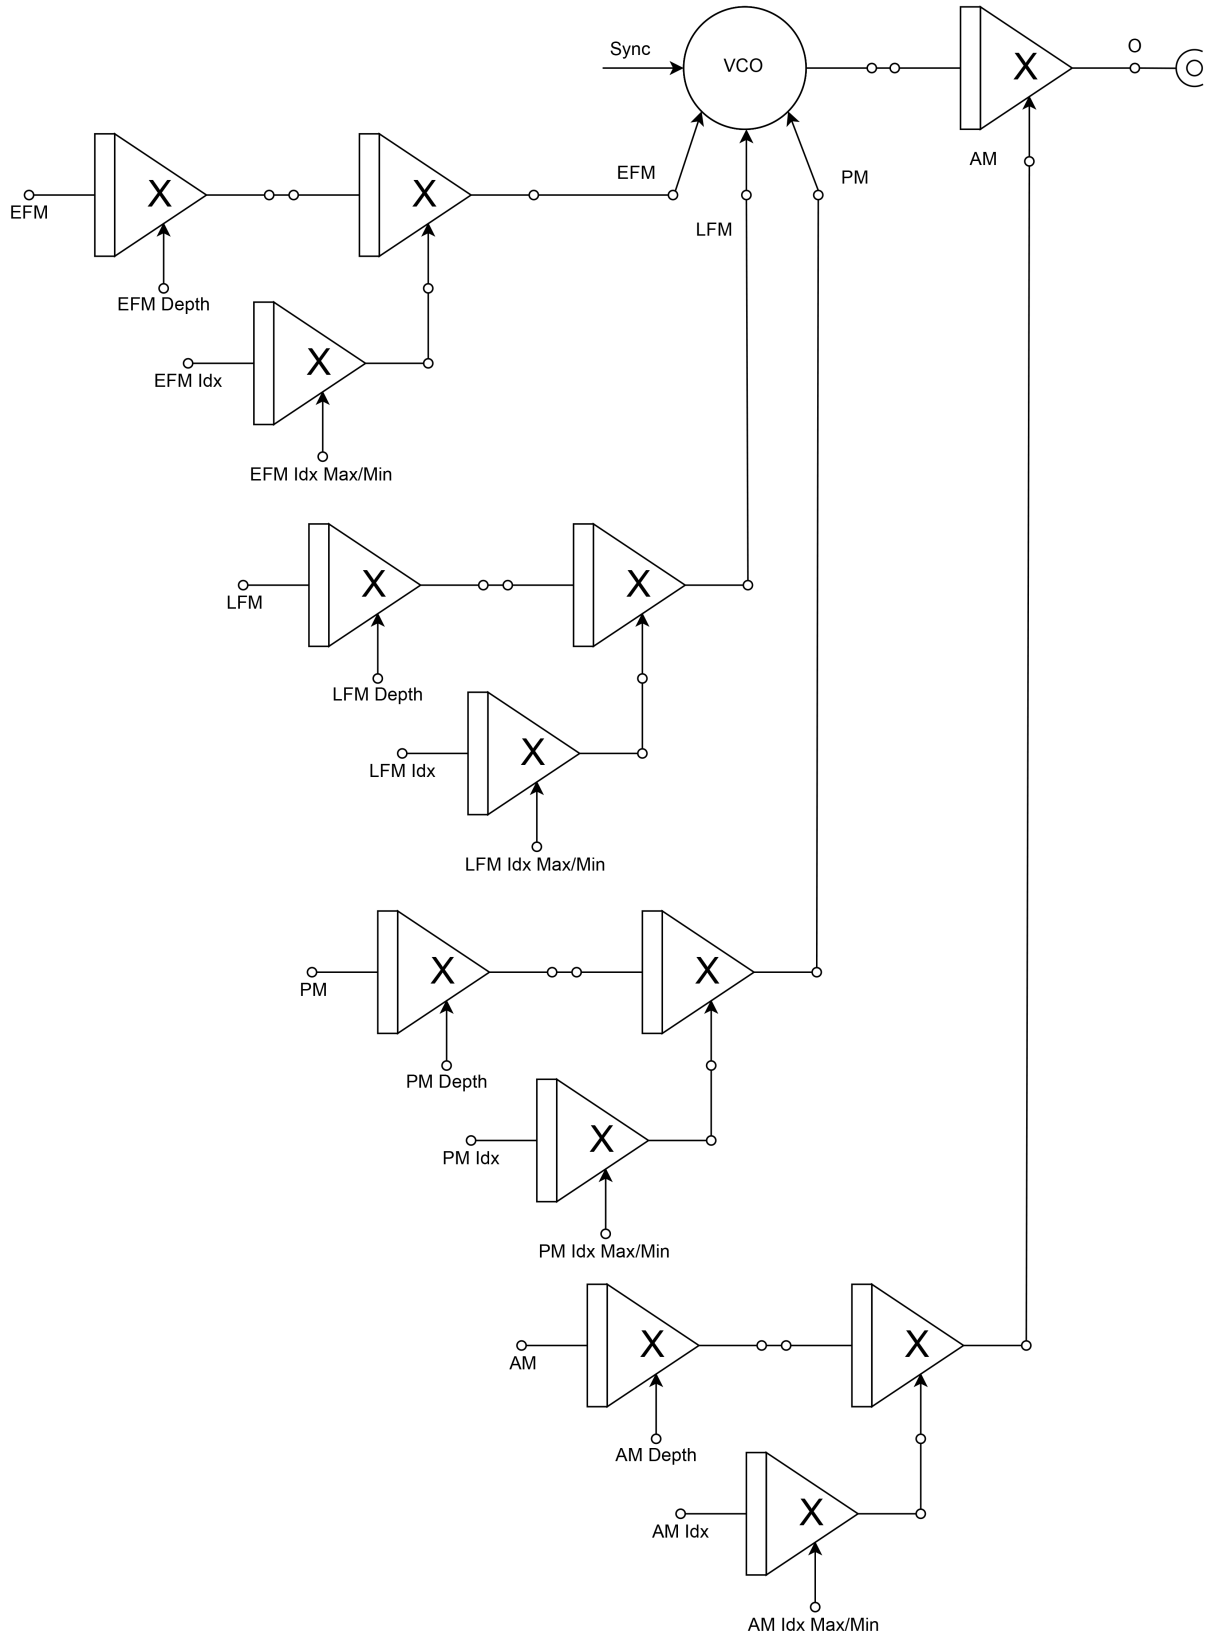



Each oscillator has 4 analog control inputs : E(xponential) FM, L(inear) FM, PM and AM, and 1 digital control input : Sync.

Each of the analog control inputs is preceded by 3 4-quadrant multipliers, enabling selection of the modulation input, selection of the index (modulation depth) input, and setting of the modulation and index depth (max. and min.), according to the parameters shown on the previous diagram.

Waveform, range, pitch mode, quantisation, sync, MIID channel, Pitch Bend range and detune are additional parameters per oscillator.

Each oscillator has 1 signal output.

# Controls and connections



## Controls

- **Coarse** frequency pot, range 12 octaves.
- **Fine** frequency pot, range + and - one semitone.
- Exponential **FM** unipolar level control, labeled FM.
- **Output** dial for module selection (O1 to O6, M1, M2, Pr, MI, U).
- **Parameter** dial for parameter selection, parameter range is dependent on the selected module.
- **Value** dial for value selection, value range is dependent on the selected parameter.
- 6 oscillator parameter page selection buttons. In Mixer mode these select the input channel. In preset mode these function as bank select buttons.
- 32 by 128 pixel graphical OLED display.
- 6 bias controls (black), labeled B1 to B6, add a bias from 0 V to 5 V to CV1 - CV6 inputs.
- 8 modulation **depth** controls (white), labeled CV1 to CV8, unipolar attenuators for inputs CV1 - CV8.

## Outputs

- 6 oscillator outputs, labeled O1 to O6, nominal output voltage from -5 V to +5 V, max. output voltage from -6 V to +6 V, with bipolar LED indication.
- 2 mixer outputs, labeled M1 and M2, max. output voltage from -6 V to +6 V, with bipolar LED indication.

## Inputs

- 8 CV input jacks, labeled CV1 to CV8, range DC to 20 kHz, -5 V to +5 V.
- Exponential **FM** input, labeled FM.
- **1V/oct** calibrated input, labeled 1V/oct.
- 6 digital inputs, accepting any signal from DC to 20 kHz, labeled D1 to D6.
- MIDI TRS (Type A, MIDI standard) input, labeled MIDI in.

## Display

- The top line at the left shows the selected module (O1 to O6, M1, M2, Pr, MI, U).
- The top lines in the middle shows the selected parameter.
- The top line at the right shows the selected value.
- The third line at the left shows the selected preset : bank and number.
- The third line at the right shows the selected preset name.
- The bottom line at the left indicates incoming MIDI messages (ON, OFF, PB, CC, SOX, EOX or ... if the MIDI channel does not match the MIDI source).
- The bottom line at the right indicates a peak value on the input(s) (1P - 8P).

## Output selection

The **Output dial** selects : VCO1 (O1) to VCO6 (O6), Mix1 (M1), Mix2 (M2), Presets (Pr), MIDI (MI), Update (U).

- Pushing the Output dial for more than one second resets the output selection to VCO1.

## Parameter and value selection

The **Parameter dial** selects from a list of parameters, dependent on the selected page, output or module.

- Pushing the Parameter dial for more than one second resets the parameter to the first one applicable for the selected page, output or module.

The **Value dial** selects from a list of values, dependent on the selected parameter.

- Pushing the Value dial for more than one second resets the value to the first one applicable for the selected parameter.
- Pushing the **Value dial** for less than a second moves from +-100, +-10 or +- 1 increments (where applicable), indicated by the cursor in the display. Pushing the **Parameter dial** for less than a second moves from +-1, +-10 or +- 100 increments (where applicable), indicated by the cursor in the display. Selecting another parameter resets the increment to a default, applicable for the parameter..

## Definitions

### Input list

Off, CV1, CV2, CV3, CV4, CV5, CV6, CV7, CV8, VCO 1, VCO 2, VCO 3, VCO 4, VCO 5, VCO 6, Note, PitchB., Veloc., Ater T., LearnCC, LCC no., MCC no.

### Sync input list

Off, D1, D2, D3, D4, D5, D6, VCO 1, VCO 2, VCO 3, VCO 4, VCO 5, VCO 6.

### Master frequency

The frequency as set by **Coarse, Fine, FM and 1V/oct** in Ratio Mode with Ratio = 1.

### ST

SemiTone, 1/12 th of an octave.

### ct

cent, 1/100 th of a semitone or 1/1200 th of an octave.

# VCO1 - VCO6

Page pushbuttons and their parameters.

## 1. Oscillator page

- Range : Sub (3000 s - 1.33 Hz), Low (125 s - 33 Hz), Mid (0.2 Hz - 820 Hz), Audio (5 Hz - 20 kHz). Default is Audio.
- Pitch Mode : Ratio, Fixed. Default is Ratio 1x.
  - In Ratio Mode :
    - Ratio : 0.1000 to 64.000 in 0.005 steps, x relative to the master frequency
  - In Fixed Mode :
    - Frequency : 0.00 (8.18 Hz) -135.00 ST (19912.12 Hz). in 0.01 steps (1 cents). 69.00 is A4 (440 Hz, tuning reference). ST is corresponding to MIDI note number.
- Wave : Off, Sine, Triangle, Sawtooth, Ramp, Square, Pulse, **On**. Default is Sine.
- Quantise : Off, Equal, Just, Pythagoras aug4, Pythagoras dim5, Mean tone, Harmonic, Werckmeister, Arabic. Default is Off. See setting the base note in the next paragraph.
- Sync input : Sync input list. Default is D1.
- Sync state : Positive edge, Negative edge, Both edges, Reset phase. Default is Positive.
- MIDI channel : Off, 1 - 16. The Oscillator specific MIDI channel. Default is Off.
- PitchBend Range : 0 - 60 ST in 1 steps. Default is 0 ST (no Pitch Bend).

## 2. Detune page

- Detune Quantise : Off, Equal, Just, Pythagoras aug4, Pythagoras dim5, Mean tone, Harmonic, Werckmeister, Arabic. Default is Off.
- Detune amount (exponential detune, just like on an analog VCO). Detunes up to 2 octaves up or down in steps of 1 cent. Default is 0 cents, max. is + or - 2400 cents.
- Fine Hz (constant beatings over the whole frequency range) amount in steps of 0.1 Hz. Default is 0.0 Hz, max. is + or - 100.0 Hz.

## 3. Exp FM page

- Exp FM Off/Input : select from Input list. Default is Off.
- Exp FM Depth : modulation depth from -1.000 to + 1.000 in 0.001 steps. Default is +1.000.
- Exp FM Idx Off/Input : FM index (depth), select from Input list. Default is Off.
- Exp FM Idx Max : max. modulation depth from -1.000 to + 1.000 in 0.001 steps. Default is +1.000.
- Exp FM Idx Min : min. modulation depth from -1.000 to + 1.000 in 0.001 steps. Default is +1.000.

## 4. Lin FM page

- Lin FM Off/Input : select from Input list. Default is Off.
- Lin FM Depth : modulation depth from -2.000 to + 2.000 in 0.001 steps. Default is +1.000. At + or - 2.000 modulation can go insanely deep, use this parameter to limit the max. modulation.
- Lin FM Idx Off/Input : FM index (depth), select from Input list. Default is Off.
- Lin FM Idx Max : max. modulation depth from -1.000 to + 1.000 in 0.001 steps. Default is +1.000.
- Lin FM Idx Min : min. modulation depth from -1.000 to + 1.000 in 0.001 steps. Default is +1.000.

## 5. Phase page

- Initial Phase : -360 to +360 degrees in 1 degree steps. Default is 0. The phase relationship of all oscillators can be restored by a long push on the Phase (5) button.
- PM Off/Input : select from Input list. Default is Off.
- PM Depth : modulation depth from -2.000 to + 2.000 in 0.001 steps. Default is +1.000. At + or - 2.000 modulation can go insanely deep, use this parameter to limit the max. modulation.
- PM Idx Off/Input : PM index (depth), select from Input list. Default is Off.
- PM Idx Max : max. modulation depth from -1.000 to + 1.000 in 0.001 steps. Default is +1.000.
- PM Idx Min : min. modulation depth from -1.000 to + 1.000 in 0.001 steps. Default is +1.000.


## 6. AM page

- AM Off/Input : select from Input list. Default is Off, which sets the VCO level to from -5 V to + 5 V.
- AM Depth : modulation depth from -1.000 to + 1.000 in 0.001 steps. Default is +1.000.
- AM Bias : bias from -1.000 to + 1.000 in 0.001 steps. Default is +1.000.
- AM Idx Off/Input : AM index (depth), select from Input list. Default is Off.
- AM Idx Max : max. modulation depth from -1.000 to + 1.000 in 0.001 steps. Default is +1.000.
- AM Idx Min : min. modulation depth from -1.000 to + 1.000 in 0.001 steps. Default is +1.000.

The following scope shots illustrate the effect of the Idx Max en Idx Min setting with an AM example.


The left side of the diagram corresponds to the bias pot (or whatever index input chosen) at minimum, the right side of the diagram corresponds to the bias pot at maximum.

The rising line (ramp) corresponds to the position of the bias pot.

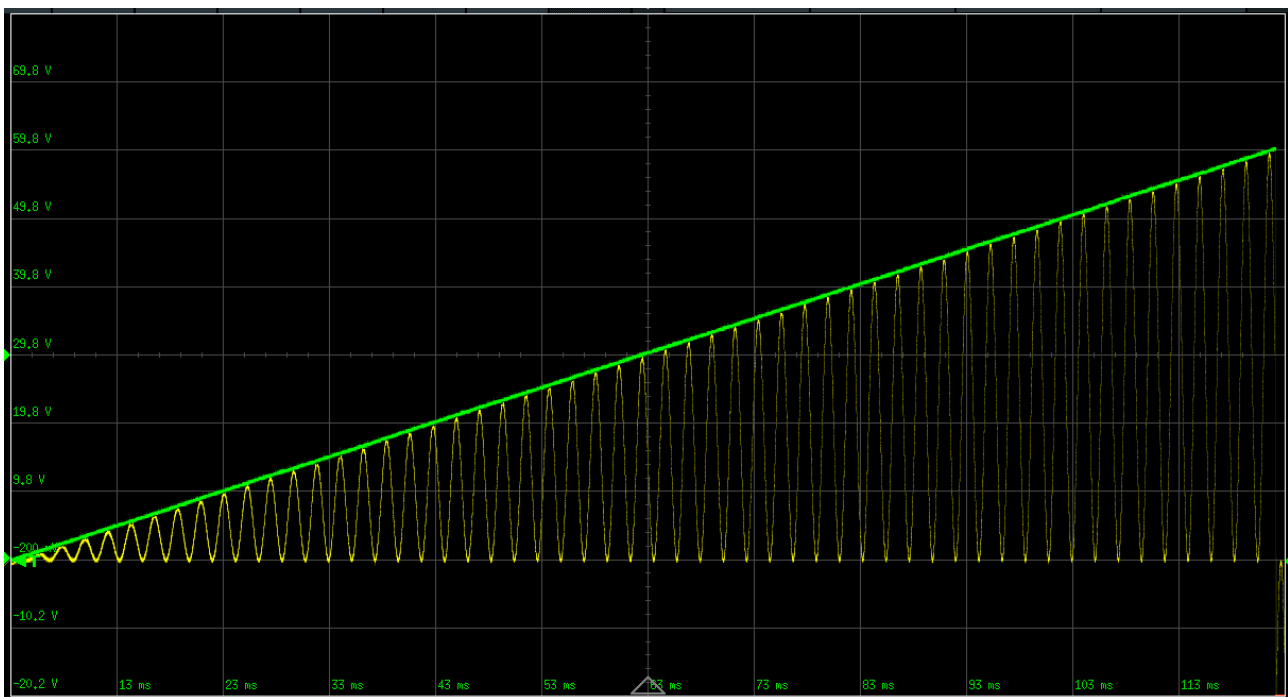


AM Idx Max = 1.000, Idx Min = 0.000

With the bias pot at minimum there is no AM, with the bias pot at maximum, there is max. AM.

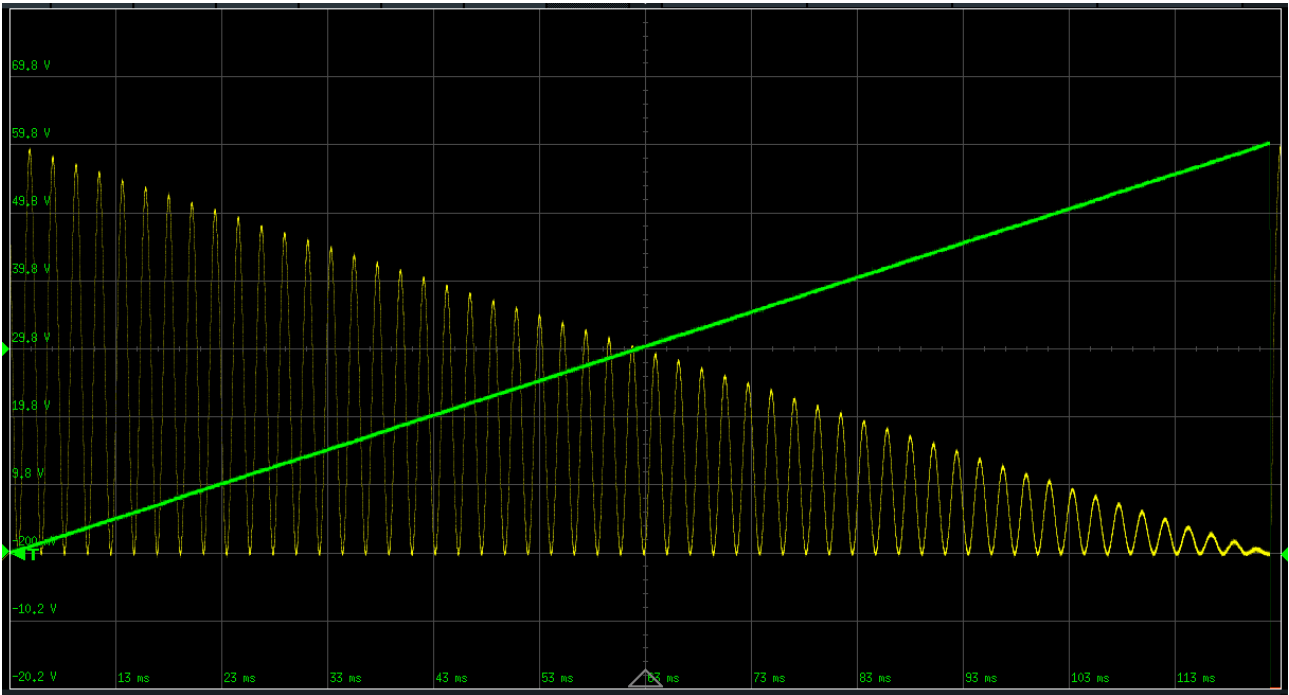


AM Idx Max = 0.000, Idx Min = 1.000

With the bias pot at minimum there is max. AM, with the bias pot at maximum, there is no AM. So this has the effect of reversing the action of the bias pot (or the CV input).

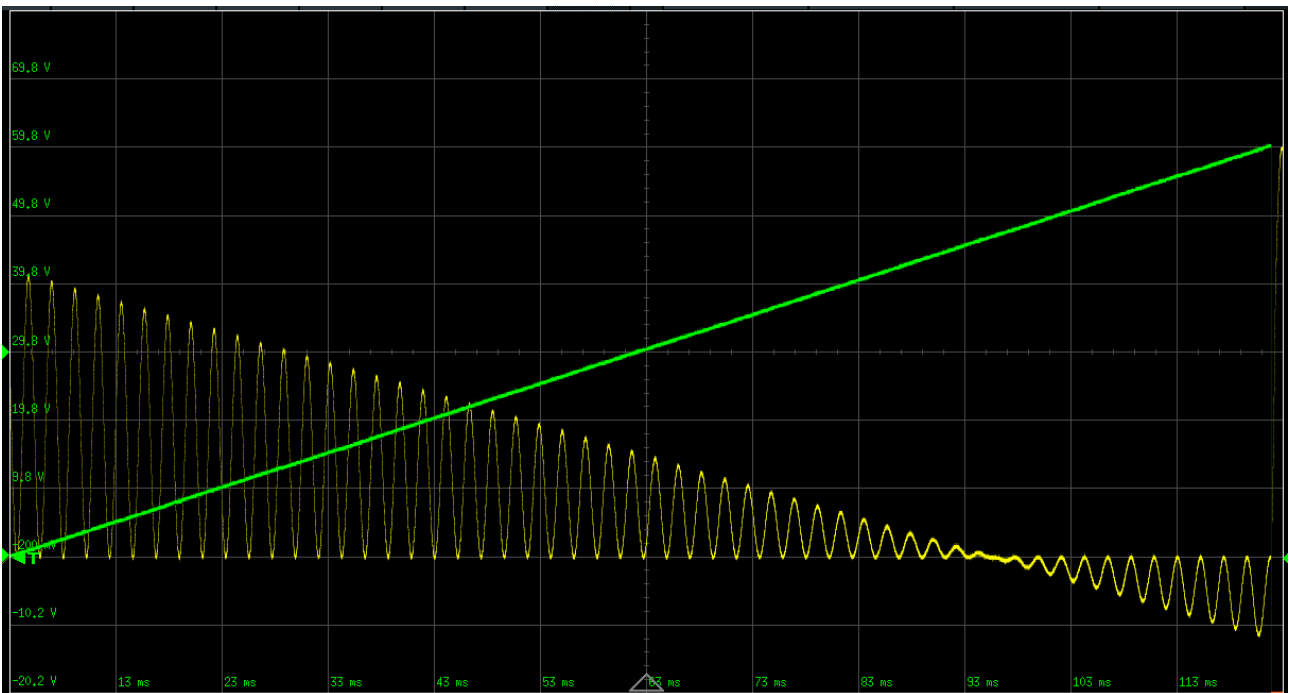


AM Idx Max = -0.200, Idx Min = 0.700

Any combination of Max and Min, positive or negative is possible.

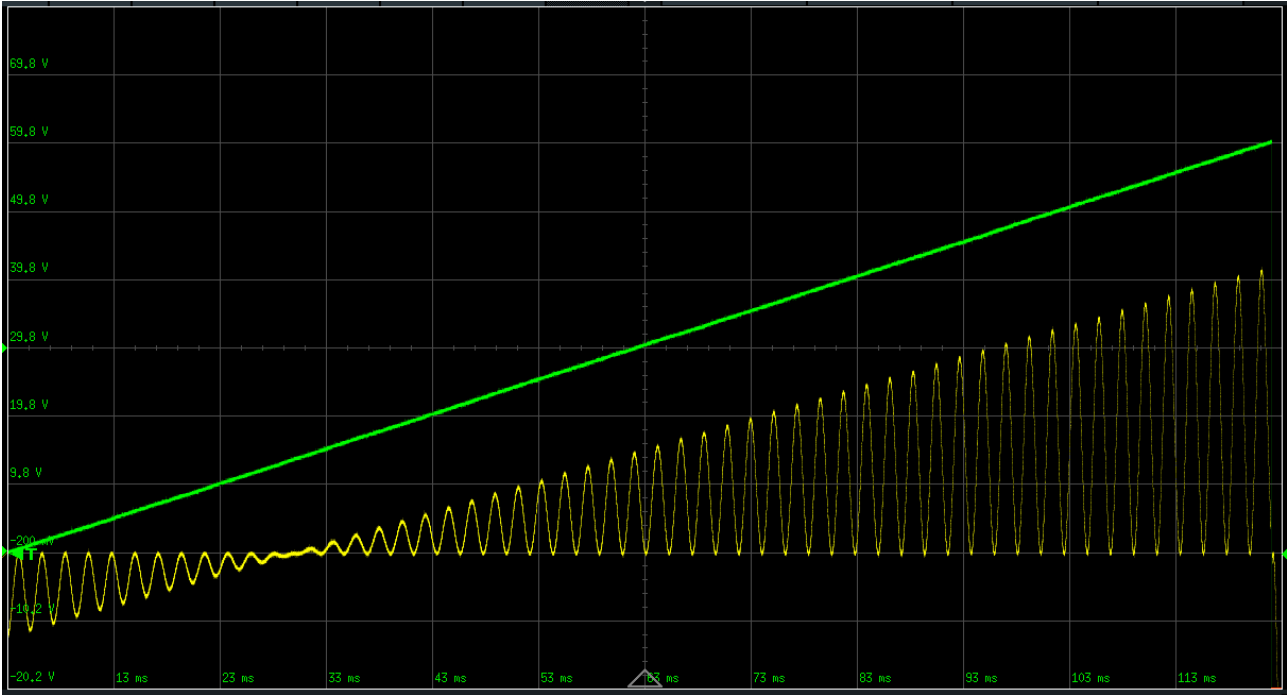

AM Idx Max = 0.700, Idx Min = -0.200

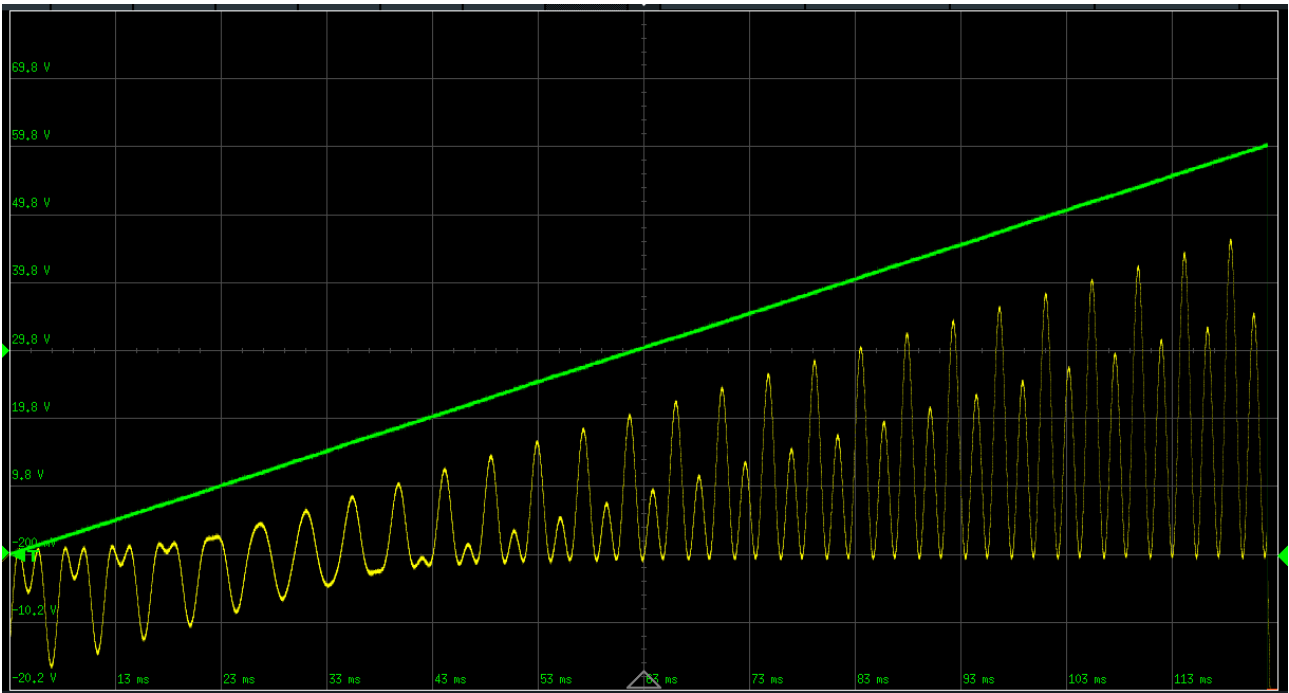

And the same as the previous one with Bias of 0.100 added.



## Copy parameters

By a long press on the “1” button in a VCO module, the copy function is activated.  
There are 3 choices.

Copy Param : this copies the current parameter to the same parameter in all VCO's.

Copy Page : select a destination VCO, this copies the current parameter page of the current VCO to the same parameter page of the destination VCO.

Copy Module : select a destination VCO, this copies all parameters of the current VCO to the destination VCO.

To exit the copy function there are 2 choices :

A long press on the “1” button will do the copy action.

A short press on the “1” button will go back to normal operation without copying.

## Bias and 4-quadrant modulator

By setting a VCO waveform to On, it can be used as a standalone bias module or a 4-quadrant modulator.

By changing the AM bias parameter, the output can be set to any value between -5 V and + 5 V.

By setting the AM bias parameter to 0, setting the AM input to one of the CV's, setting the AM index input to another CV, the output will be the 4-quadrant product of both CV inputs, hence a 4-quadrant modulator for external signals.

So if you have 1 or more spare VCO's in the module, it can be used as either bias or 4-quadrant modulator.

## Quantiser setting the base note

The Base note is C (middle C (C4) is 60 ST).

To get to the base note, set VCO1 to Equal and VCO2 to Pythagoras. Turn the **Coarse** frequency pot until both VCO's are at the exact same frequency (zero beatings).

The base note can be changed by setting a detune value in whole steps.

Fine tuning can be done with the **Fine** frequency pot, which is not quantised.

## Mix1, Mix2

Pushbuttons select Input channel / Level 1 to 6.

- Input : select from Input list, Off disables the input. Default for input channel 1 of both mixers is VCO1. Other input channels default to Off.
- Level : from -100 (inverts signal) to +100. Default for input channel 1 of both mixers is 100. Other input channels default to 0.

The following parameters appear for each input channel for convenience, they are applicable to all input channels.

- Clipping : *Hard*, *Soft*. Default is *Hard*.
- Limiting : Off (Takes the sum of all enabled input signals, will cause clipping if levels are set too high), Max. (Takes the sum of all enabled input signals x 1.5 divided by the number of enabled inputs, may cause clipping if signals are in phase, but gives stronger output), Min. (Takes the sum of all enabled input signals divided by the number of enabled inputs, will never cause clipping, even if all levels are at - or +255, but gives weaker output). Default is Min.

## Presets

Load and save settings in presets.

Pushbutton 1 selects user bank 1 (U1), pushbutton 2 selects user bank 2 (U2), pushbutton 3 selects factory presets (F), factory presets cannot be saved.

The **Value** dial selects a preset number in a bank (1 - 64).

### Load :

- Long press the **Parameter** dial to load.
- If found : load proceeds and the display changes to “Loaded”.
- If not found : display shows “Not found”.

### Save :

- Long press the **Parameter** dial.
- If nothing is saved in the selected preset : proceed to naming the preset.
- If the selected preset is already occupied : display shows “Overwrite” “No”. If you really want to overwrite this preset, turn the **Parameter** dial to “Yes”. Long press the **Parameter** dial.
- Display shows “Name ? “. Name the preset : the **Parameter** dial selects the cursor position, the **Value** dial changes the character above the cursor, the Buttons select part of the complete character set.
- Initially and after each cursor move, the selection is the complete character set, limit this by pushing Button 1 ... 4.
- Button 1 selection ! “ # \$ % & ‘ ( ) \* + , - . /
- Button 2 selection number 0...9 : ; < = > ? @
- Button 3 selection upper case characters A...Z [ \ ] ^ ‘
- Button 4 selection lower case characters a...z { | } ~
- Long press the **Parameter** dial, save proceeds and the display changes to “Saved”.

To exit Load or Save without loading or saving, turn the **Parameter** dial.

## Notes (Steps)

Set an oscillator to Audio range, and Pitch mode Fixed.

Note number (ST) 60 is middle C (C4).

Note number (ST) 69 is A4, 440 Hz, which can be used as tuning reference.

Note numbers correspond to MIDI note numbers.

Here is an overview of all note values in the 4th octave :

C	60
C#	61
D	62
D#	63
E	64
F	65
F#	66
G	67
G#	68
A	69 (440 Hz)
A#	70
B	71

To obtain note value (ST) in other octaves, add or subtract a multiple of 12 to the above values.

# MIDI

## Sysex

Sysex for presets and firmware updates is implemented, see further in this manual.

## Program change

Program change 1 - 64 and bank select (LSB) 0 (U1), 1 (U2), 2 (F) loads the preset if available. MIDI Channel for Program change and bank select can be selected (1 - 16, default is 1) with the [Value Dial](#).

## Notes and pitch bend

Note on events and Pitch Bend are specific for each VCO, according to the specific MIDI channel for the VCO.

If the ratio of a second VCO has to follow the frequency of a first VCO that is set to MIDI, set the second VCO to the same MIDI channel as the first VCO.

Note number 60 (middle C, C4) does not affect the set (as with [Coarse](#) and [Fine](#)) VCO frequency, higher note numbers will increase, lower note number will decrease the set frequency.

Setting the quantiser to anything but Off or Equal will use a different scale for the MIDI notes.

Note number, Pitch Bend, Velocity, After Touch and C(ontinuous)C(ontrollers) can be selected as (index) Inputs.

## Continuous controllers

The easiest way to assign a CC is to set the input value to LearnCC. Then move any controller and it will have immediate effect on the selected input. The controller number is saved. Then set the input value to LCC (Learned CC), the number after LCC is the learned CC. Do not leave the input value to LearnCC because any other controller that changes will overwrite the LCC value.

It is also possible to select any other CC from the MCC (Manual CC) list : MCC1 - MCC31 (MSB, CC 33 - 63 are the LSB), MCC 64 - MCC 119.

Please note that CC 33 - 63 cannot be used, because MIDI defines them as the LSB counterparts of CC 1 - 31. There are controllers (e.g. fader banks) that implement CC 33 - 63 as if it were MSB controllers, this is not according to the MIDI specification and if possible they should be set to proper CC numbers.

# Overview of factory presets

See the preset sheets for a detailed description.

- 1 : Triangle wave.
- 2 : LFO Exp FM.
- 3 : Sync.
- 4 : Quantise and tunings.
- 5 : Detune.
- 6 : FineHz.
- 7 : Exp FM.
- 8 : Lin FM.
- 9 : PM.
- 10 : AM.
- 11 : Chord sine
- 12 : Chord saw.
- 13 : Use with a sequencer.
- 14 : All waveforms.
- 15 : Phase offset 90 degrees.
- 16 : Phase offset 60 degrees.

# Usage tips, patching

## Startup

All VCO's are in Audio range, Ratio mode, ratio 1x, Sine wave, MIDI, Pitch Bend, Quantise and Detune Off, Phase at 0 degrees, all modulations Off, output level from -5 V to +5 V, Sync from D1 on positive edge. Parameter page selected is Oscillator, parameter selected is Range.

Mixer 1 has VCO1 on input 1 full strength, hard clipping, limit Off. Parameter selected is Input1.

Mixer 2 has VCO1 on input 1 full strength, hard clipping, limit Off. Parameter selected is Input1.

## Explore VCO parameters and settings

Connect Mix1 and Mix2 outputs to your output module.

Turn the **Coarse** and **Fine** knobs to get a feel of the frequency range.

Change the frequency range of VCO1.

Change the waveform of VCO1.

Select Input2 on Mix1 and set it to VCO2, set Level2 to 100.

Set Limit to Min.

You will now hear an equal mix of VCO1 and VCO2 on Mix1 output.

Select Input2 on Mix1 and set it to Off.

Select Input1 on Mix2 and set it to VCO2.

You will now hear VCO1 on Mix1 output and VCO2 on Mix2 output.

Change the Ratio of VCO2 to 2x, 3x etc. Also try fine Ratio.

Turn the **Coarse** and **Fine** knobs and observe the VCOs keep their ratio.

Change the mode of VCO2 to Fixed, set the step parameter, then turn the **Coarse** and **Fine** knobs, observe VCO1 changing frequency and VCO2 not.

## Explore VCO outputs

Patch the individual outputs to your output module.

Use separate outputs for different waveforms. See preset 14.

Use separate outputs for different phases. See presets 15 and 16.

Use separate outputs for chords. See presets 11 and 12.

## Explore Mixers

The mix of VCOs can be controlled from AM, Set the AM input of the VCOs to CV, and use the Bx pots or MIDI to control the levels, and/or apply CV to the CVx inputs for VC mixing.

A mix of CVs can be controlled in the same way.

## Explore inputs and external modulations

Apply Exponential **FM** to all VCO's (patched from another module, e.g. a VCO, LFO or envelope) and turn the **FM** pot up.

Apply **1V/oct** from a keyboard or a MIDI interface or use the MIDI input.


Apply Linear FM to VCO1 (Select Lin FM input CV1 patched from another module, e.g. a VCO, LFO or envelope) and turn the CV1 pot up.

Set Lin FM Idx of VCO1 to CV2, patch output from another module, set CV1 pot to 10 and turn B2 pot up for modulation depth and/or CV2 pot for index modulation.

Exponential FM, PM and AM can be controlled in the same way.

## Explore internal modulations

Load preset 8.

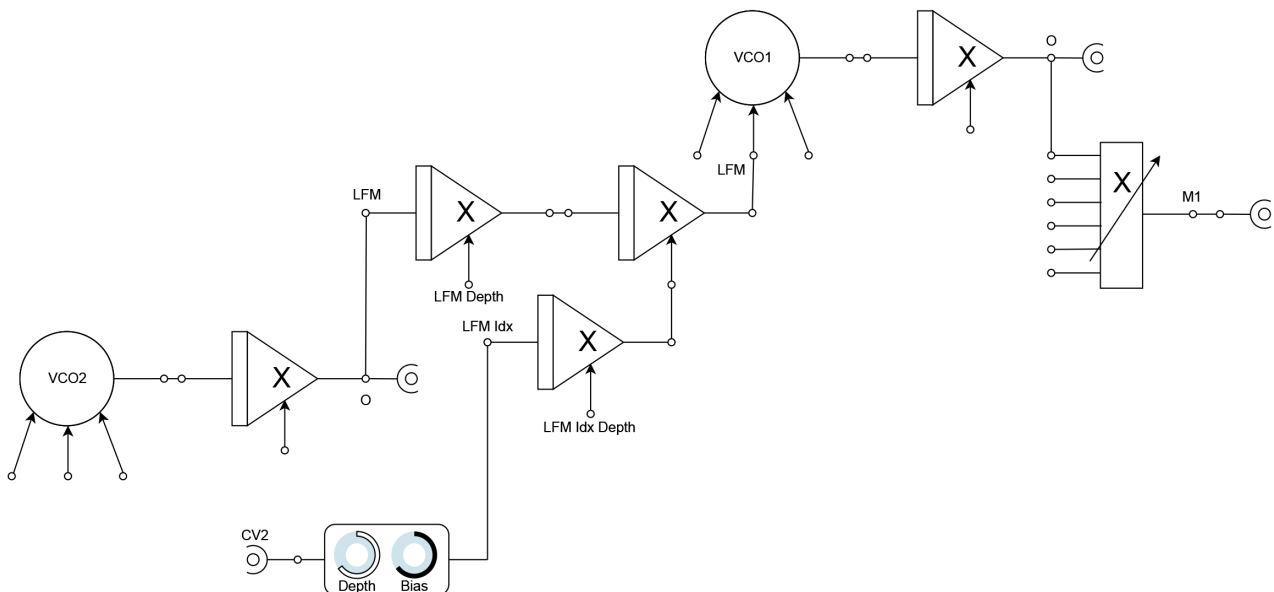

Apply Linear FM to VCO1 from VCO2 (Select Lin FM input VCO2).

Set Lin FM Idx of VCO1 to CV2, turn B2 pot up to control the modulation depth. You can also use a MIDI controller as the Lin FM Idx to control the modulation depth.

Change VCO2 Ratio, next set VCO2 to Fixed mode and change VCO2 ST.

Exponential FM, PM and AM can be controlled in the same way. See presets 7, 9 and 10.

# Factory presets update

## Preparation :

- Download the latest presets file fpresets\_x\_y.zip file from the website to your computer.
- Unzip the file, resulting in a fpresets\_x\_y.syx file and a relase\_notes.pdf file.
- Read the release notes.
- Connect a MIDI cable from your MIDI interface to the MIDI TRS (Type A, MIDI standard) input.
- On a Mac, use SysEx Librarian app (<https://www.snoize.com/SysExLibrarian/>), load the fpresets\_x\_y.syx file.
- On Windows, use MIDI SysEx Transfer Utility (<https://apps.microsoft.com/detail/9pfd4ddwgktn?hl=en-us&gl=US>).

## Update :

- Select Update with the **Output** dial. It will display : “U, Update Pre/Firm”.
- Pressing the **Parameter** dial for more than one second will reboot the module into the updater.
- It will display : “U, Update Presets, Idle”.
- Select Update Presets with the **Parameter** dial.
- Pressing the **Parameter** dial for more than one second will first erase the old presets (this takes a few seconds) and then display “Sysex?”
- The module is now waiting for a sysex transfer.
- Start the transfer in SysEx Librarian.
- The display will start scrolling while the transfer proceeds, this takes max. 1 minute.
- When the transfer is complete, the display will show “Success”.
- Now turn the **Parameter** dial to “Restart dionisi” and press it for more than one second.
- Dionisi will now restart with the new presets.

## Possible errors :

- SID E! Wrong sysex identifier received (must be \$7D).
- DID E! Wrong device identifier received (must be \$01).
- FID E! Wrong format identifier received (must be \$02).
- CHK E! Checksum does not match.
- ER E! Flash memory not properly erased.
- VER E! Error in verification of flash vs. transferred file.

Please press the **Parameter** dial for more than one second if any of these occur to retry the update.



# Firmware update

## Preparation :

- Download the latest firmware file dionisi\_x\_y.zip file from the website to your computer.
- Unzip the file, resulting in a dionisi\_x\_y.syx file and a relase\_notes.pdf file.
- Read the release notes.
- Connect a MIDI cable from your MIDI interface to the MIDI TRS (Type A, MIDI standard) input.
- On a Mac, use SysEx Librarian app (<https://www.snoize.com/SysExLibrarian/>), load the dionisi\_x\_y.syx file.
- On Windows, use MIDI SysEx Transfer Utility (<https://apps.microsoft.com/detail/9pfd4ddwgktn?hl=en-us&gl=US>).

## Update :

- Select Update with the **Output** dial. It will display : “U, Update Pre/Firm”.
- Pressing the **Parameter** dial for more than one second will reboot the module into the updater.
- It will display : “U, Update Presets, Idle”.
- Select Update Firmware with the **Parameter** dial.
- **Warning !** You have a last chance here to leave the updater without changes : turn the **Parameter** dial to “Restart dionisi” and press it for more than one second. Dionisi will now reboot with the current firmware.
- Pressing the **Parameter** dial for more than one second will first erase the old firmware (this takes a few seconds) and then display “Sysex?”
- The module is now waiting for a sysex transfer.
- Start the transfer in SysEx Librarian.
- The display will start scrolling while the transfer proceeds, this takes about 2 minutes.
- When the transfer is complete, the display will show “Success”.
- Now turn the **Parameter** dial to “Restart dionisi” and press it for more than one second.
- Dionisi will now reboot with the new firmware.

## Possible errors :

- SID E! Wrong sysex identifier received (must be \$7D).
- DID E! Wrong device identifier received (must be \$01).
- FID E! Wrong format identifier received (must be \$01).
- CHK E! Checksum does not match.
- ER E! Flash memory not properly erased.
- VER E! Error in verification of flash vs. transferred file.

Please press the **Parameter** dial for more than one second if any of these occur to retry the update.

## Features for a next firmware release

These will be implemented in future firmware updates, free downloads from the website.

- Mixer soft clipping.
- More factory presets.